



Thank you for your purchase of the Dragonfly™ Distortion by Tone Freak Effects™!

The Dragonfly™ utilizes a classic distortion circuit that has been modified for increased flexibility, while keeping the characteristic of its classic heritage.

IMPORTANT! The Dragonfly™ utilizes components that need about 60 seconds to "warm-up" in order to sound correct after each time you have disconnected power or unplugged the input jack.

CONTROLS

Drive: Increase the distortion by turning the knob clockwise. Turning the knob counter clockwise will decrease the distortion.

Tone: Turning the knob clockwise will increase the high end tone. Counter clockwise will decrease the high end and increase the low end tone.

Level: To increase the output volume, turn the knob clockwise. By turning the Level control counter clockwise, you will decrease the output volume.

2-Way Mini-Toggle: The Dragonfly™ has 2 different distortion characters.

- **Left** position creates a "smooth" distortion character
- **Right** position engages the more aggressive, "grainy" type of distortion.

The Dragonfly™ uses a 9V battery or a 2.1 mm center negative pin power adapter.